



www.silkpaint.com

art@silkpaint.com

1 800-563-0074


Woodburning and Fiber Etch®

Select a clear, fine-grained wood. We recommend birch-faced plywood.

Sand lightly, and use a slightly damp cloth to remove dust.

Apply Fiber Etch® in lines from the bottle, with the AirPen®, or use a foam decorator stamp. Dry thoroughly.

If using a very porous wood, or applying heavy lines of Fiber Etch®, dry as you go with a hairdryer to prevent wicking.

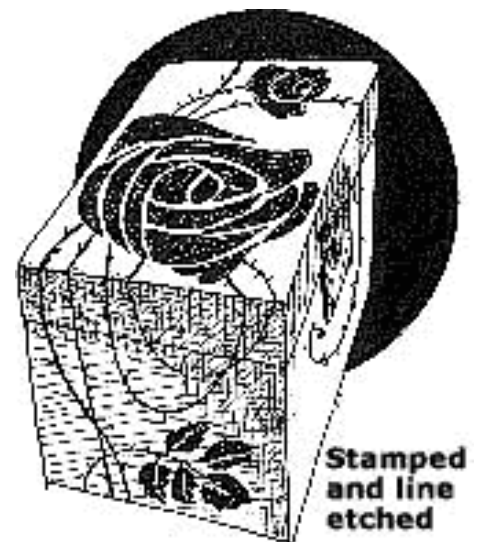

Working in an area with circulating air, heat activate with a heat tool until the color is as desired. Color will change from light brown to dark brown to black. Alternatively, you may heat activate in a 200° oven for a few minutes.

Dip a damp cloth into baking soda to remove any Fiber Etch® residue from the surface of the wood and wipe clean. Stain if desired.

On Birch Faced Plywood

