

To Clean

Soak dispensing tips and followers in water after each use and prior to cleaning. Important! Never soak or submerge electric pump or adapter in water.

1. Remove cartridge from dispenser, remove dispensing tip, and remove follower with puller tool.
2. Use plunger to empty cartridge. Tip: a bit of water will enable plunger to slide easily through cartridge.
3. Use plunger to pull water into cartridge and flush thoroughly. Dispensing tips may be cleaned in a similar manner by attaching a tip onto the cartridge and flushing with water.

Vacuum Pick-Up Tool



For precise pick-up and placement of fine beads, pearls, and embellishments, the professionals' choice is the Vacuum Pick-up Tool.

Contact Amazon.com, or visit Silkpaint.com for more information.

SILKPAINT PRODUCTS

Innovative products for creative solutions



Visit us online at Silkpaint.com and SugarVeil.com

Patent number 5579960
© SugarVeil Products Corporation, 2015


Silkpaint Products
18220 Waldron Dr.
PO Box 18
Waldron, MO 64092
Email: info@silkpaint.com

The AirPen® Color Dispenser is fully warranted against defects in material and workmanship for a period of one year from the date of purchase.



The AirPen® Color Dispenser is a handheld, air powered tool for drawing fine decorative details or for color filling intricate engraved areas. Paints, glues, ceramic glazes and slip, and other viscous mediums are effortlessly dispensed by placing a finger over the flow control hole to create delicate lines, dots, and embellishments without hand fatigue.

The patented AirPen Color Dispense is drip-free and supplied with an air compressor and all accessories.

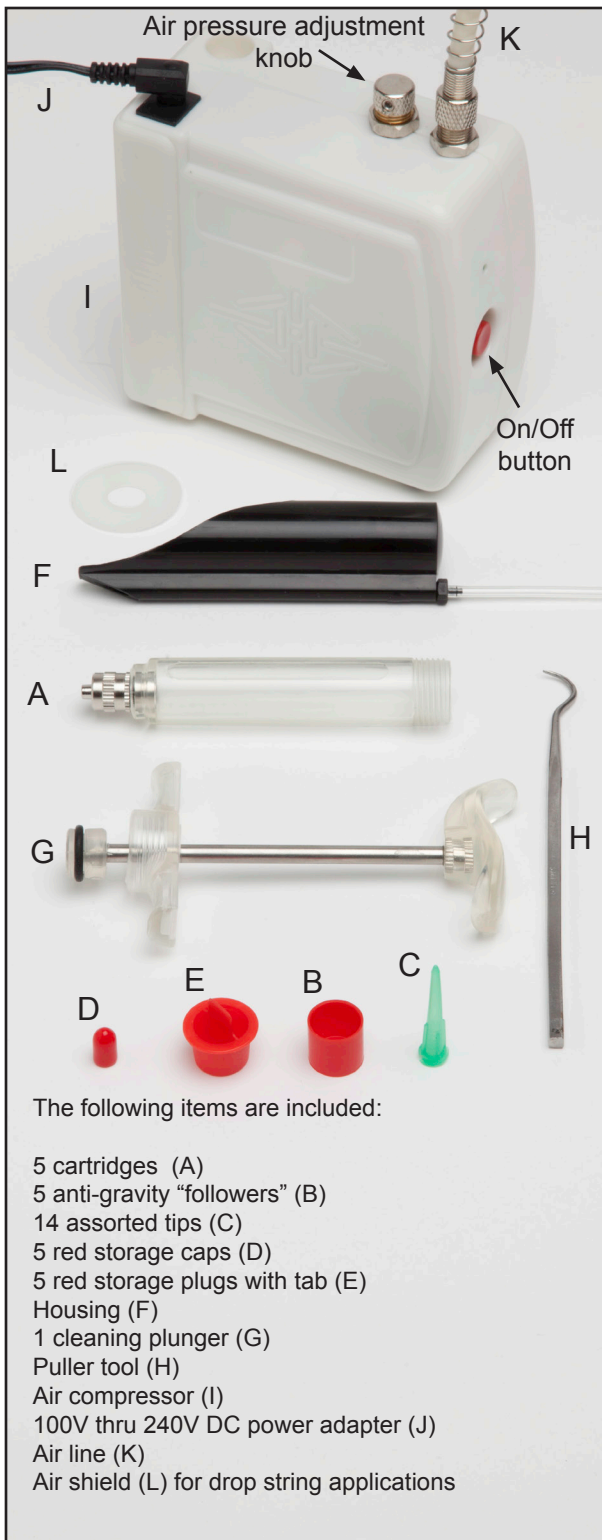

The AirPen® Color Dispenser - Instructions


Screw on airline (K) and connect the power adapter (J) to pump as shown.




Place a storage cap (D) onto the end of cartridge (A) to retain contents. Pipe contents into cartridge to about 2/3 full. Insert a 'follower' (B), solid end first, into cartridge. Use the puller tool (H) to gently compress contents into the cartridge.



Hold black housing in one hand, as shown. With the other hand, twist filled cartridge into the housing twisting clockwise using a downward twisting motion to screw into housing.

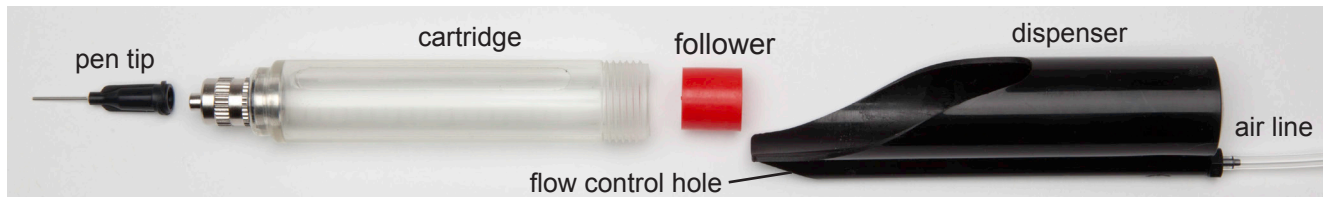

Plug power adapter into outlet [for specific plug configurations, attach appropriate, locally-available device to this plug for universal compatibility] and push red button to turn on pump.

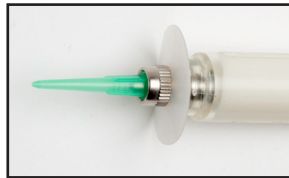

Remove the storage cap and twist on a green dispensing tip (C). Note: always ensure that tips are clean and tip openings are clear (you should be able to see light through them) before placing onto cartridge.

For any "drop string" color applications, insert clear air shield (L) over the metal knurled band.



The AirPen® Color Dispenser is now ready to use and should be held with the tip pointing downward so contents do not flow back into the air passages.

To begin flow, first touch the dispensing tip onto the desired surface. Then lightly cover the entire area of the flow control hole with forefinger. Lift finger to stop flow. The flow speed is increased/decreased by varying fingertip pressure over the hole, or by changing the tip size.

When not in use, temporarily place the filled cartridges, tips pointed down, into a cup containing a moist paper towel.

To end operation, remove the dispensing tip and replace with a storage cap, then turn off air compressor. Remove cartridge from housing and insert storage plug (E) at open end of cartridge, or clean as noted on reverse.